


Assembly Instructions - Large Rod Rack

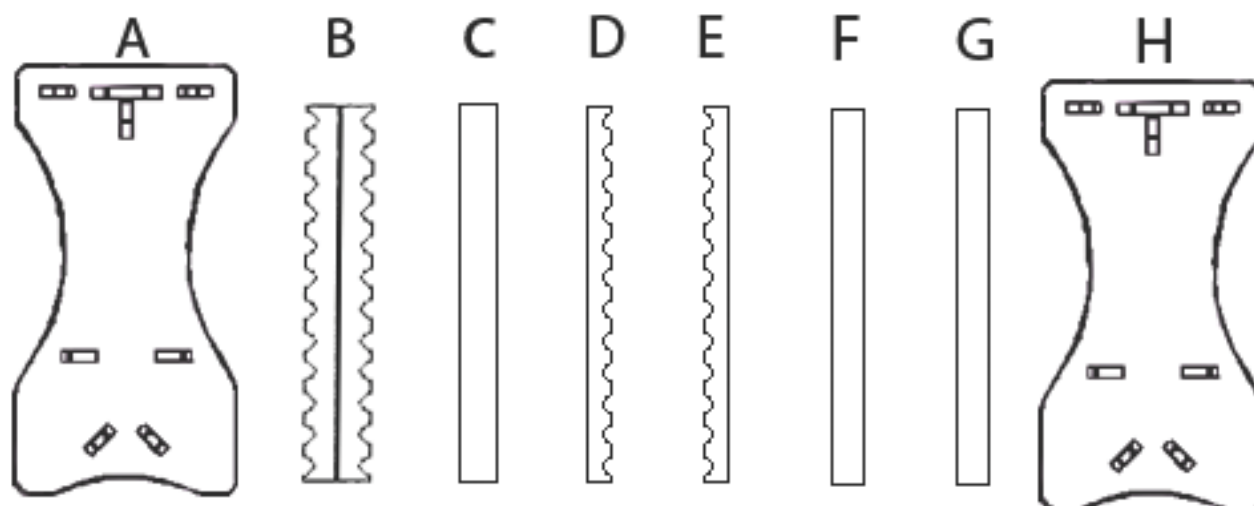

STEP 1 Insert item C into the bottom side of item B and insert screws into the pre-drilled holes. Note, item C is 3 1/8" wide and is the wider of the 3 support cross bars.

STEP 2 Insert items B and C into the "T" shaped cutout at the top of Item A and insert screws into the pre-drilled holes.

STEP 3 Attach item H to the other end of the "T" (combined items C & D). Insert screws into the pre-drilled holes.

STEP 4 Insert Items D and E (both facing inward) and insert items F and G into the bottom pre cut slots. You can gently spread Items A and H during this step. Insert screws in the pre-drilled holes.

STEP 5 Attach handles on the ends.

Assembly is complete.

Thank you for your purchase..

Please contact us if you have any questions or comments...

Key Largo Adirondack Company
305-290-5522
Randy@KeyLargoAdirondack.com