



*GENTLY TAP SLATS INTO GROVE WITH MALLET TO ASSSURE TIGHT FIT.
*SCREW IN PLACE

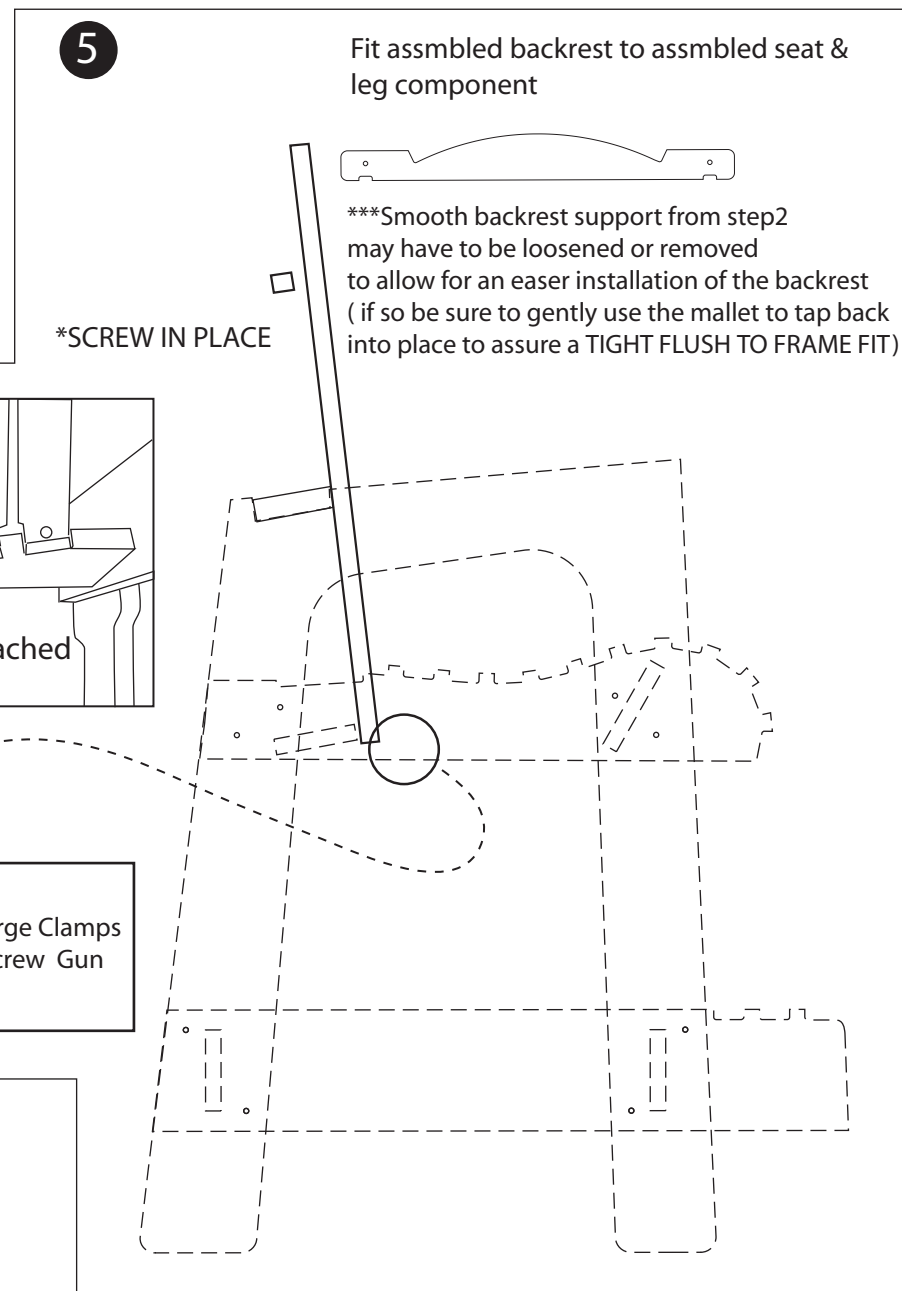

- List of tools needed:
- Rubber Mallet • Nut Wrench • Large Clamps
 - Phillips Screw Driver • Star Bit / Screw Gun
 - Clear PVC Glue • Utility Knife

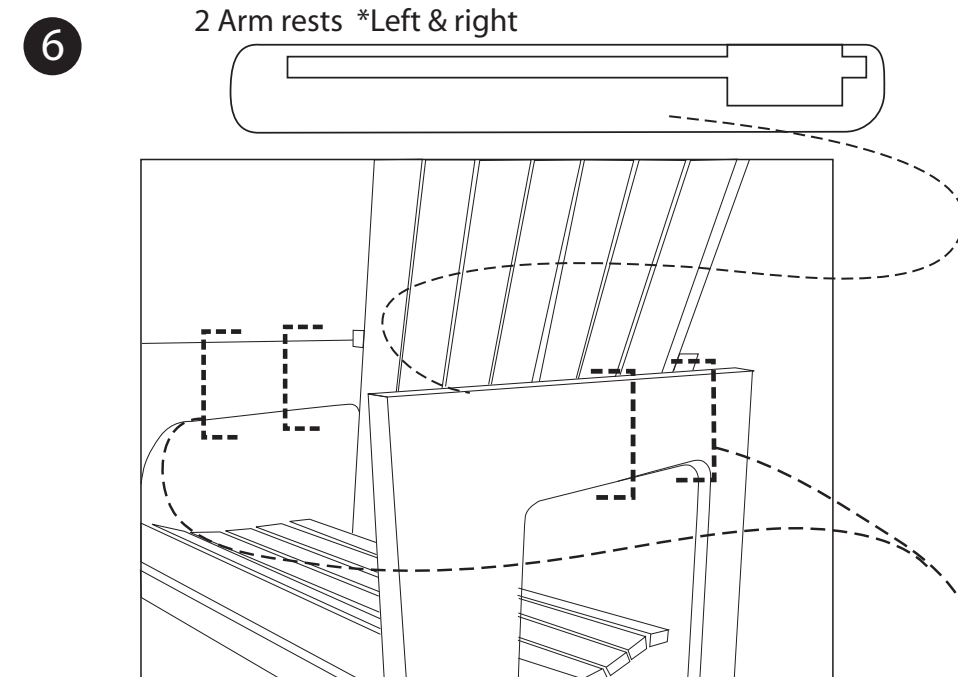

STEP 1: Check the fit of the armrest before proceeding with the application of the PVC glue

STEP 2: Apply the clear PVC glue to side leg ledge and to slot on arm rest.

STEP 3: Clamp 2 parts together (or wrap firmly with heavy tape, or place heavy flat object on top) to assure a tight bond.

STEP 4: Allow PVC glue to set 20 min, carefully remove clamps.....ENJOY YOUR CHAIR!

BAR STOOL ASSEMBLY INSTRUCTIONS

*Read instructions through before starting assembly

GG MILLWORK CONTRACTOR, INC

(305) 852-1718