




Ottoman Assembly Instructions

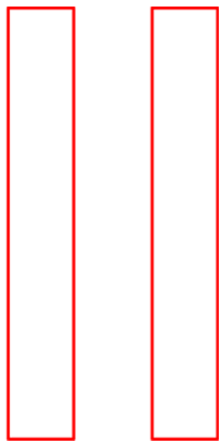

Part(s) "A" Two - End Connectors


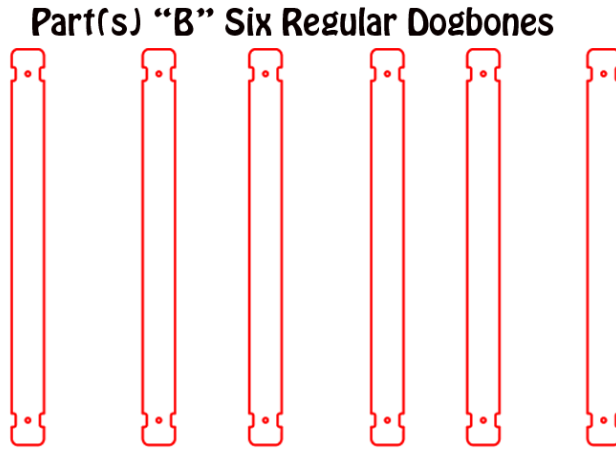


Part(s) "B" Six Regular Dogbones

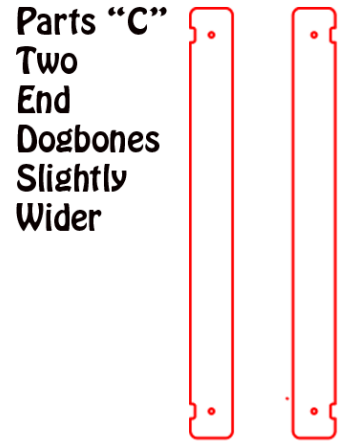

Parts "C"
Two
End
Dogbones
Slightly
Wider

Part(s) "D"
Two End
Pieces

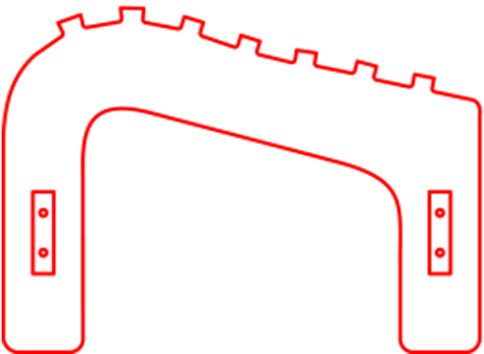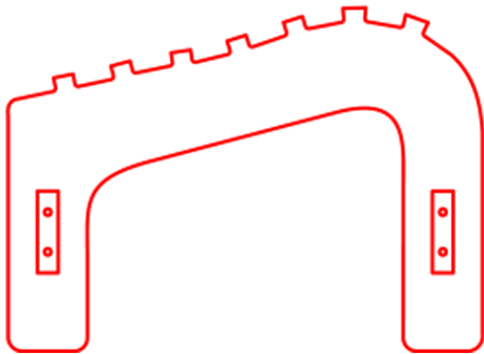

Step #1:

Insert End Connectors (Part "A") into slots on both End Pieces (Part "D"). Attach with Stainless Steel Screws provided.

Step #2:

Insert six Regular Dogbones (Part "B") into the middle slots leaving the two slots on the ends open. Attach with Stainless Steel Screws provided.

Step #3:

Insert the two slightly wider end Dogbones (Part "C") into the end slots on the ottoman. Attach with Stainless Steel Screws provided.