


Bench Assembly Instructions


Parts List



Part "A"



Part "C"

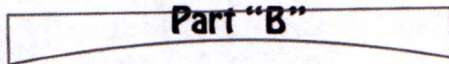




Part "B"





Brace



Chair Arms

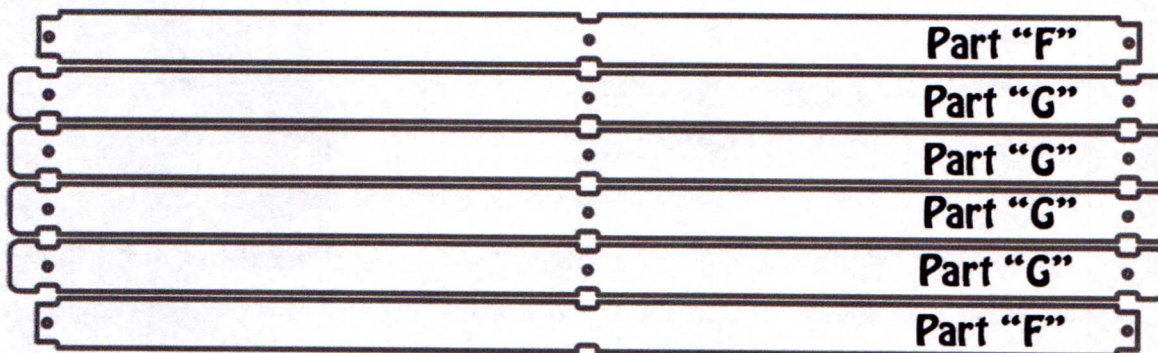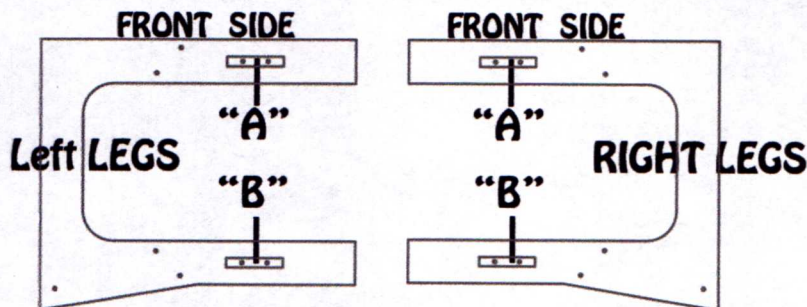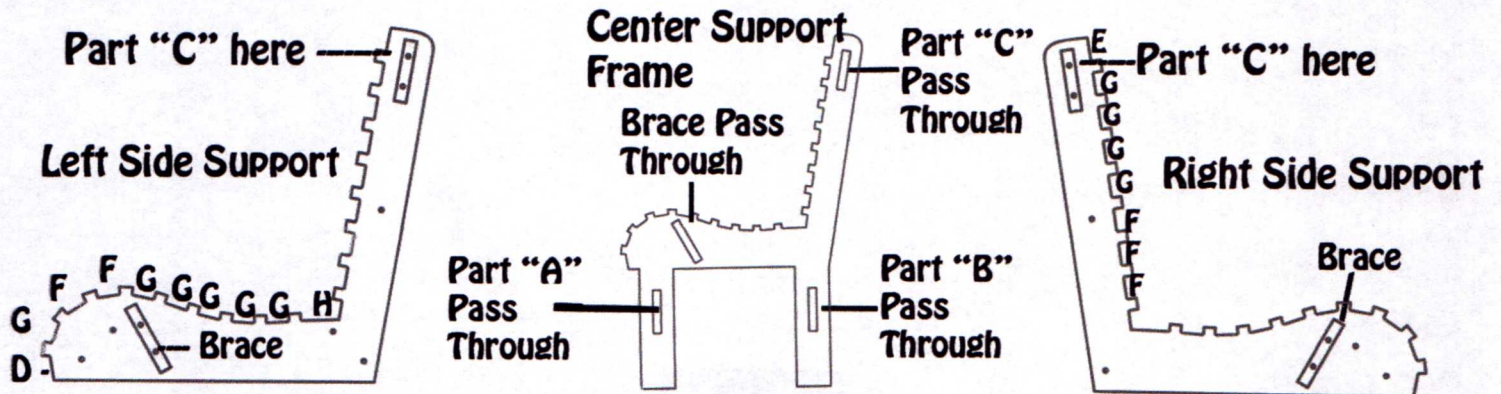

Chair Back Pieces

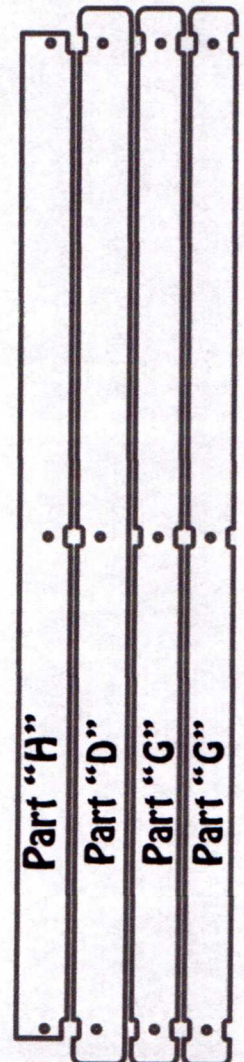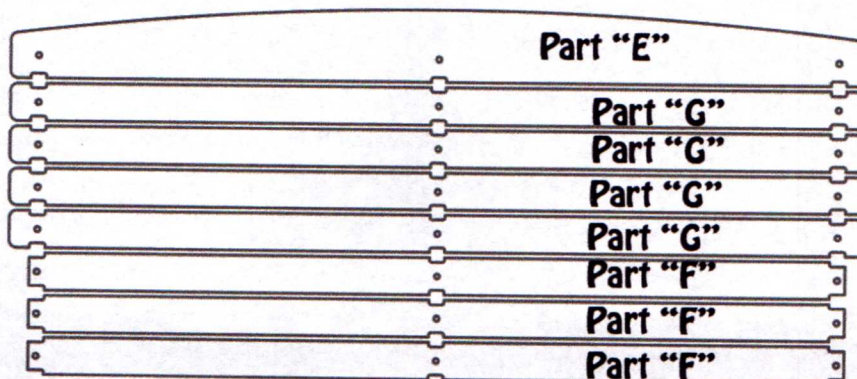

BENCH ASSEMBLY INSTRUCTIONS

Required Tools: 1) Square Drill Bit – AKA, Square drive.
 2) Small can of PVC Glue

* A Mallet is handy but not required.

Step 1 Place Right Side Support , Left side Support, & Center support on bench

Step 2 Attach Brace to Left Support using screws provided. After attaching the brace, slide it through the center Support. Repeat this step with Part C.

Step 3 Attach the Left Side Support to Part C and the Brace.

Step 4 Attach Left Leg using Sidewalk bolts, washer, and Nut

Step 5 Now Slide Part A with the radius down through the center support and attach to the Left leg. Repeat this with Part B

Step 6 Attach Right leg to frame with sidewalk bolts, washers, and nuts. Align Parts A and B and screw together.

Step 8 Stand frame up right and start to attach the Slats. It is easier to start in the middle of the chair using parts "G". Gently tap the slats into place. After installing all of the "G" Slats you may move on to the remaining slats. I,E,F,G,& H

Step 9 Attaching the Arms – Apply PVC glue to both the underside of the arm and also to top part of legs support. If you have C clamps, use them. Otherwise, sit something heavy on the arm for about 20-30 minutes.