



# Chaise Lounge Assembly Instructions


## Part(s) "A" Std Dog Bones (34)

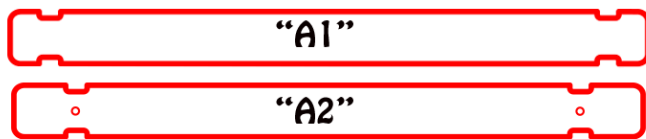


## Part(s) "B" Other Dog Bones

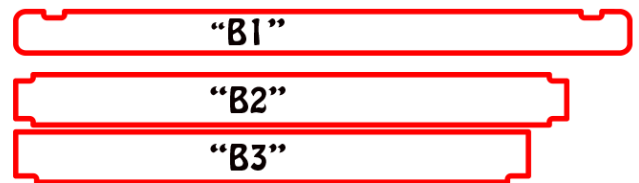


## Part(s) "C" Full Length Side Panel (2)

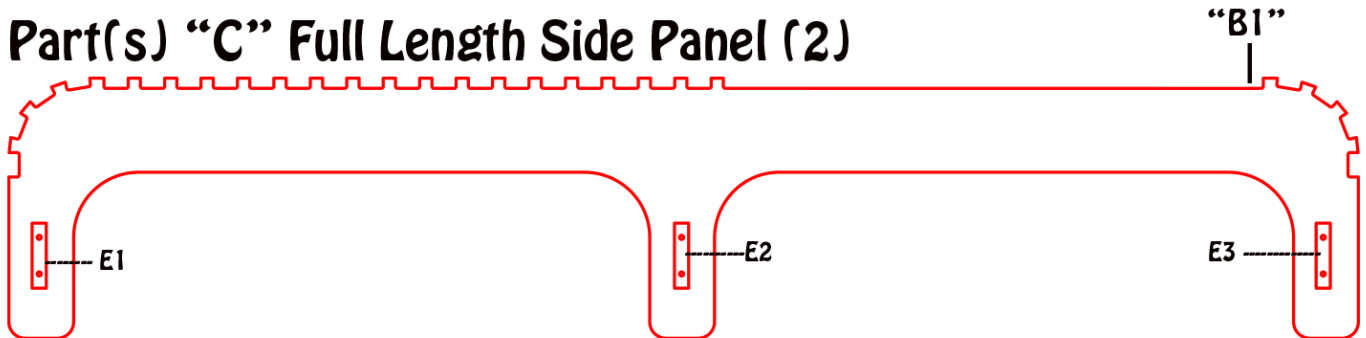


## Part(s) "D"

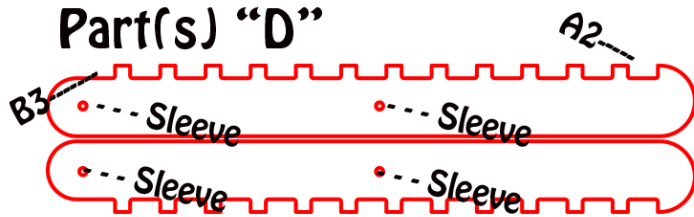


## Part(s) "F"

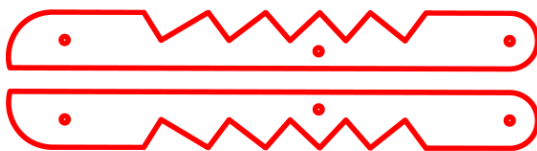

## Part(s) "E"

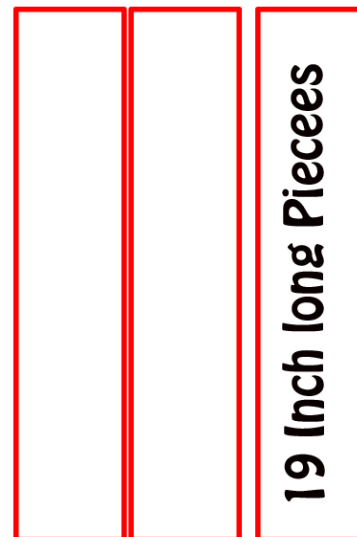

## Part(s) "G" Ratchet Support

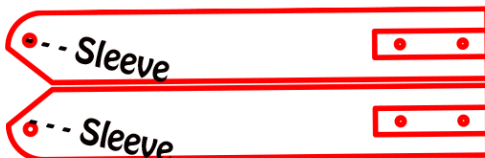

## Part(s) "H"



## Part "I"



# CHAISE LOUNGE ASSEMBLY INSTRUCTIONS

## STEP 1.

Match up both full length side panels. Attach Parts E-1, E-2, and E-3 Into slots on both side panels using stainless steel screws provided.

## STEP 2.

Attach 21 Standard Dog Bones (Part A) on the long side of the Chaise and 4 on the "Short" side of the Chaise in the slots provided.

## STEP 3.

Attach "B1" Dog Bone on top of "Short" side as indicated.

## STEP 4.

Attach Part(s) "F" with "SS" Sidewalk bolts to Frame on the inside. These parts can only bolt in one direction. If the bolts do not line up, turn part F around. Note, the teeth should face upwards.

## STEP 5.

Place Part "H", a 16" long support bar, into slots on Part "G". Screw in but do not tighten until you have placed Part "I" on the bottom of Part "E-4". Now place Parts "D" parallel to each other and apply "A-2" Dog Bone from top down. Part "B-3" should be placed in last.

## STEP 6.

Place the "chair back" on top of the chair frame and align the large holes. Place the Sleeve (provided) through both pieces and push an SS Sidewalk Bolt through the sleeve and place a washer and lock nut on the end. Repeat process with other set.

